

Installation Instructions for Universal Mount

Your shipment includes:


1. Vinyl strips with punched holes on 2" centers
2. Universal bar bracket for both wall mount and header mount
3. Face plate clamp bracket
4. 1/4" hex nuts
5. 1/4" socket head cap screws

Tools Required:

1. Ladder
2. Electric drill with 1/2" bit
3. 7/16" socket wrench and 5/32" Allen wrench
4. Utility knife or scissors

INSTRUCTIONS FOR MOVING TRACK INSTALLATION:

1. Install bar bracket level by using it as a template and marking with pencil through predrilled holes. (Recommended clearance between top of load and bottom of bar bracket is 6"-12".) Drill mounting holes.
2. Mount bar bracket to wall.
3. Position vinyl strips on factory-installed studs allowing for appropriate overlap.
4. Secure strips with face plate clamp bracket (flanges facing out) and hex nuts.
5. If the total width of all strips attached is wider than the track, trim the last strip to fit or increase overlap distance.
6. Trim strips to clear floor by approximately 1/8".
7. To replace individual strip, unscrew the hex nut, remove the outer bar and replace strips as needed.

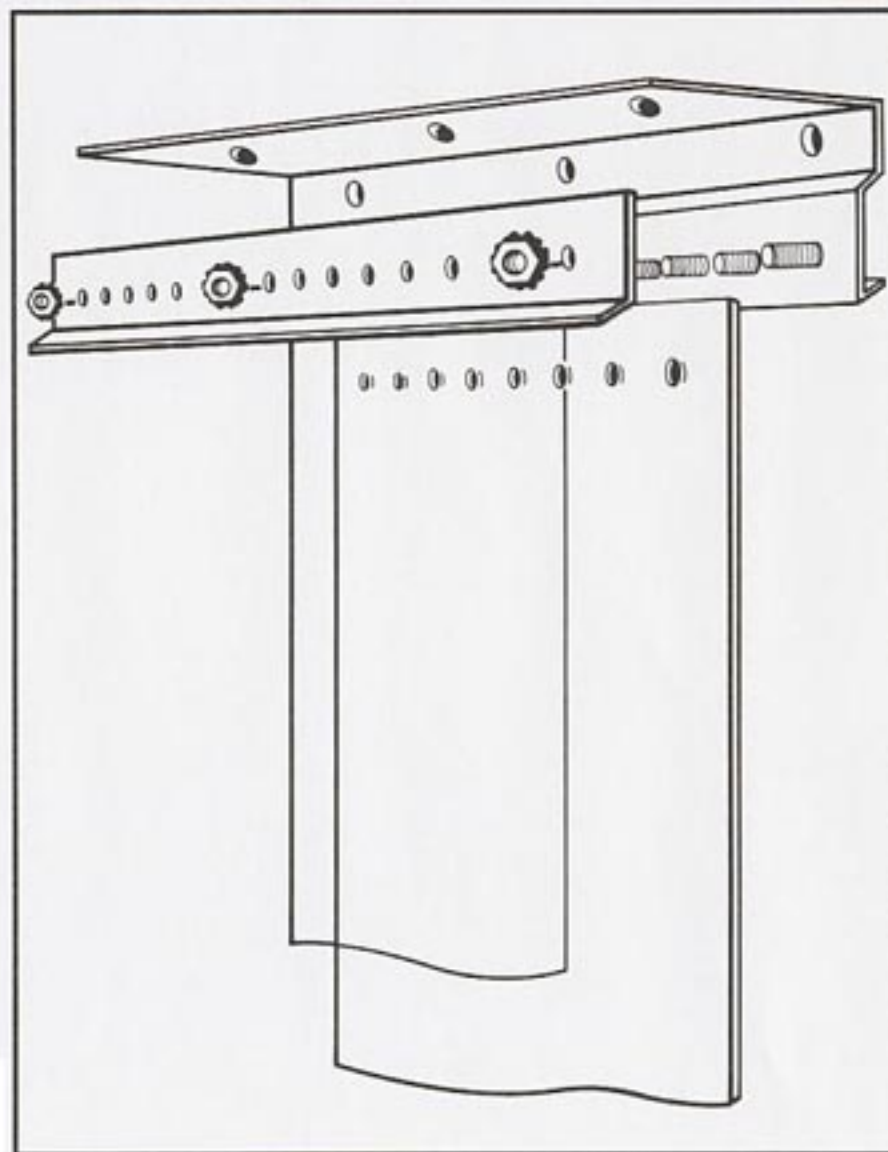

StripDoorsForLess.com